



Set jumper J1 for connection to external ground.
 Jumper J1 not set will result in virtual GND.

| | | |
|---|-------------|----------------|
| <h1 style="text-align: center;">Supply +/- 15V</h1> | | 2 |
| | | REV.: 15.09.08 |
| TITLE | DATE: | |
| FILE: supply.sch | --<(kmk)>-- | PAGE: 1/1 |
| | DRAWN BY: | |