



Set jumper J1 for connection to external ground.
 Jumper J1 not set will result in virtual GND.

<h1 style="text-align: center;">Supply +/- 12V</h1>		2 REV.:
		27.10.08 DATE:
TITLE	supply.sch	--<(kmk)>-- DRAWN BY:
FILE:		PAGE: 1/1